



How To Use The Ultra-Drain Seal™, Clear Model

Protective cover for drains, grates and manholes against accidental spills, while allowing for visual inspection.

Follow these easy steps to assure maximum effectiveness:

1. Make sure the Ultra-Drain Seal™, Clear Model is the correct size.


For best results, use a Ultra-Drain Seal™, Clear Model which is 6" larger than the outside of the grate.

2. Apply the Ultra-Drain Seal™, Clear Model.

- Remove all stones, branches, or other debris off the object you desire to cover.
- Remove the plastic film from the Ultra-Drain Seal™, Clear Model and remember to keep it to re-apply before storage.
- Place the Ultra-Drain Seal™, Clear Model over the drain, grate, or manhole you desire to seal.
- To gain a faster seal you may step on the Ultra-Drain Seal™, Clear Model. Never attempt this after spill has reached the drain.

3. Always decontaminate the Ultra-Drain Seal™, Clear Model before reuse or storage.

- Wash the Ultra-Drain Seal™, Clear Model and its plastic film in warm water with a non-abrasive detergent or petroleum solvent cleaner.
- Dry both the Ultra-Drain Seal™, Clear Model and plastic film with a cloth and re-apply the plastic film to the Ultra-Drain Seal™, Clear Model.
- Using the tube provided, roll up the Ultra-Drain Seal™, Clear Model and place it back into the container for storage.
- Store the Ultra-Drain Seal™, Clear Model out of direct sunlight, and at room temperature.

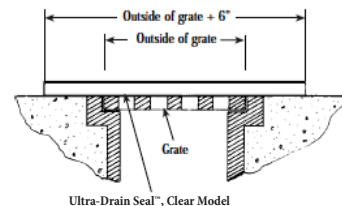

These chemicals are compatible for use with Ultra-Drain Seal™, Clear Model:

Acetone*	Hydrogen Peroxide
Aluminum Salts	Kerosene
Ammonia	Methyl Alcohol
Barium Salts	Methyl Ethyl Ketone* (MEK)
Benzyl Alcohol	Methylene Chloride*
Boric Acid Sol.	Naptha
Butane	Nitrogen Oxides
Butanol	Oil, Mineral
Calcium Salts	Phenol
Carbon Dioxide	Sodium
Chloroform*	Sulfuric Acid (Med. Conc.)
Chloroethane VG	Tetrahydrofuran (THF)
Copper Salts	Toluene
Cyclohexanone	Trichloroethylene*
Formaldehyde	Triethylamine
Freon	Tropylene Glycol
Gasoline	Turpentine
Glycol Ether	Water
Hydrochloric Acid (Med. Conc.)	
Hydrofluoric Acid (Med. Conc.)	

* Will cause the Ultra-Drain Seal™, Clear Model to swell temporarily but not degrade.

IMPORTANT NOTES:

- Never allow the Ultra-Drain Seal™, Clear Model to touch itself for long periods of time.
- The Ultra-Drain Seal™, Clear Model will become less flexible if stored in cold temperatures.
- Due to the nature of softer urethane, the physical properties of these products may change with exposure to certain environmental conditions like temperature, humidity and UV radiation. Please inspect the stored product regularly to ensure it is in a usable state.
- Not intended for long-term outdoor use (more than two (2) hours), as UV exposure and/or heat for extended periods can degrade the product. For applications where extended use may be required, the Ultra-Drain Seal Plus should be considered.



Ultra-Drain Seal™, Clear Model helps seal off drains and allows for inspection to minimize problems!

Other UltraTech products for you

For spill containment:




Ultra-SpillPallets™

For leaking or ruptured vessels:



Ultra-Tourniquets™

Contains or diverts liquids:

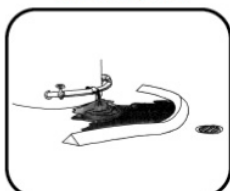

Ultra-SpillBerm™

Want to know more about these products?

Great! Just call our toll-free number and we'll send you more information on all UltraTech products and the name of your nearest distributor.



UltraTech International, Inc.

11542 Davis Creek Court

Jacksonville, FL 32256

(800) 353-1611 • (904) 292-1325 Fax

www.SpillContainment.com